

How to change photo paper and ribbon ink (DNP DSRX1)



1. Connect the **power cable**.
2. Connect the **USB cable**.
3. **Turn on** the power.



4. Release the **open lever**.
5. Open the **front cover**.




6. Remove **ribbon holder** and **paper holder**.
7. Set a **new roll of paper** on the paper holders.




8. Set the paper into the printer.



9. Insert the paper.

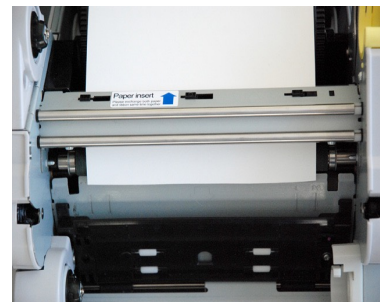


10. Fit and align the paper.

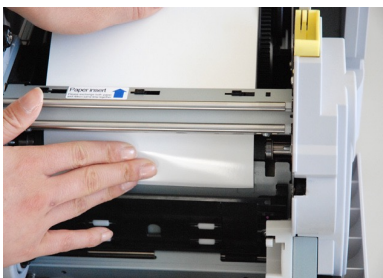


11. Insert the paper **under the black paper guide**.



12. Until the **buzzer beep**.

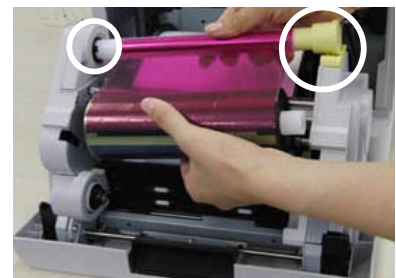

13. Set the ribbon to the printer **from left to right**.

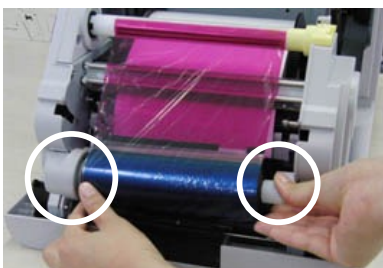

14. Set the ribbon to the printer **from left to right**.



15. Close the **front cover**.



16. Set the **paper tray** to the printer.